



HOW TO PREPARE YOUR OPENING FOR THE NEW STEEL DOORS, HINGED SYSTEM

- All horizontal and vertical walls must be made with a waterpas
- Finished with corner profiles (around the opening) and plastered, painted before placing the door / finished
- Floor must be finished as well

CORRECT MEASUREMENT – Hinged system

When your door measurement is for instance **900** x **2300** mm, then your opening must have **905** x **2305** mm. That means we add 5 mm mounting gap for each door model

DOOR PLINTH

Door plinth is not a problem when you are planning to install the hinged door. You can use a plinth with a thickness of up to 20 mm












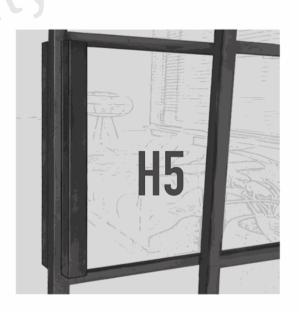















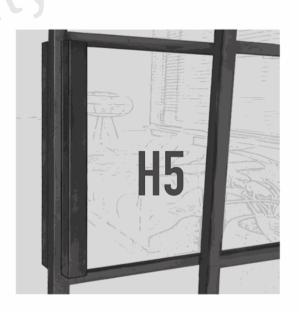



SLIDING DOOR WITH FIXED PANEL



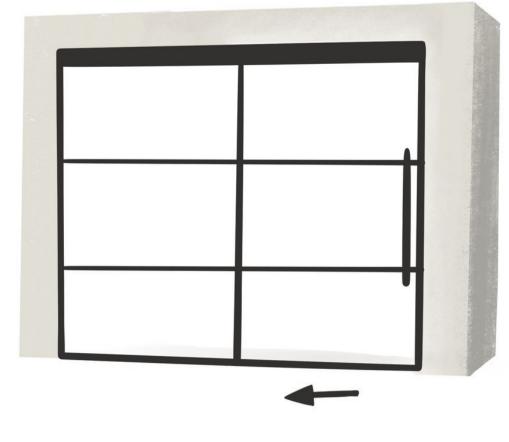

LEFT


RIGHT



SLIDING DOOR





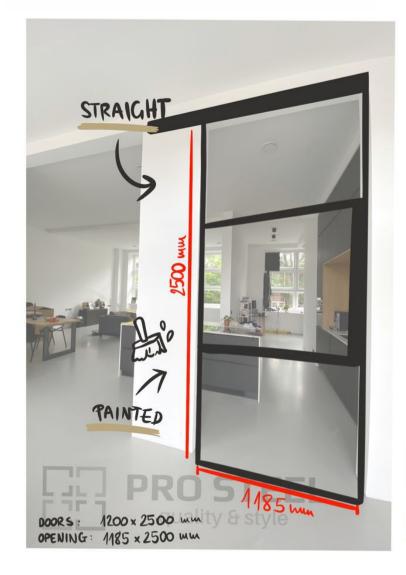

HOW TO PREPARE YOUR OPENING FOR THE NEW STEEL DOORS, SLIDING SYSTEM

- All **horizontal** and **vertical** walls must be made with a **waterpas**
- Finished with corner profiles (around the perimeter) and **plastered**, **painted** before placing the door / finished
- Floor must be finished as well

CORRECT MEASUREMENT

- The opening must be **15 mm smaller** in width than the ordered door

If the door size is for instance **1200** x **2500**, the opening width should be **1185** mm

What does it mean? It means that doors mounted outside the opening, will be wider by **15mm**, than the opening

DOOR PLINTH:

SLIDING: the sliding system works best without a plinth.









LEFT

RIGHT





HOW TO PREPARE YOUR OPENING FOR THE NEW STEEL DOORS, SWING SYSTEM

- All horizontal and vertical walls must be made with a waterpas
- Finished with corner profiles (around the perimeter) and **plastered**, **painted** before placing the door / finished
- Floor must be finished as well

CORRECT MEASUREMENT – Swing System

DOOR PLINTH:

For swing doors, the maximum thickness of the plinth is 5mm or without the plinth

PLINTH IN THE FRAME: none

IMPORTANT: If the size of the door you want to buy is 900 x 2300, your opening should also be 900 x 2300. Our swing door will be slightly reduced in size and adjusted to fit the 900 x 2300 opening.

You can install a swing door if you have underfloor heating, but the pipe from the heating system must be 15 cm from the wall. (see drawing).

Installing the swinging system requires drilling into the floor by 3 cm.